


OEM Rearview camera

MANUAL

(for camera with 8m cable in the package)

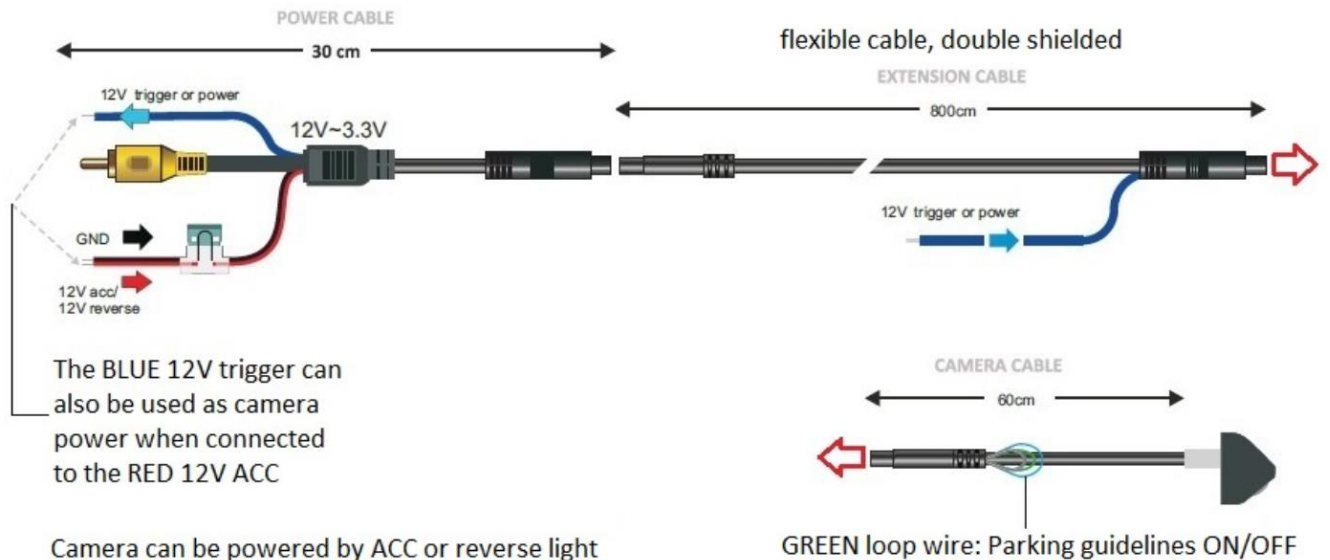

Camera can be powered by ACC or reverse light

- if reverse light (connect 12V trigger (blue out) with 12V ACC (red) and other blue wire to reverse light)
- if ACC (connect red to ACC 12V and camera blue wire to reverse light, blue out will serve as monitor trigger then)